

1.1 POE configuration

- POE configuration
- POE policy
- PD query

1.1.1 POE configuration

Commands	Description	CLI mode
poe max-power <power>	Set the maximum total power of the POE system	Global configuration mode Switch(config)#
[no] poe enable	Enable/disable POE, default mode enable	Interface configuration mode Switch(config-ge1/1)# Switch(config-vlan1)#
poe mode (auto 48v 24v)	Setting interface POE mode, (auto/48V/24V), default auto	Interface configuration mode Switch(config-ge1/1)# Switch(config-vlan1)#
[no] poe high-power (48v 24v bt hipoe)	Setting interface POE output power (The output power of 48v POE and 24v POE can be set separately) default 30w, hipoe 60w, bt 90w,	Interface configuration mode Switch(config-ge1/1)# Switch(config-vlan1)#
show poe	Show all ports POE info	Common mode Switch> Privileged mode Switch#

1.2.2 POE Policy

Commands	Description	CLI mode
[no] poe policy enable	Enable/disable POE policy, default mode disable	Interface configuration mode Switch(config-ge1/1)# Switch(config-vlan1)#
[no] poe policy shutdown clock <clock-value> week-day <day-value>	Setting or cancel interface POE policy entry. This command can be set multiple times, default no Settings POE policy entry. Clock-value is the time or time range in 24-hour. If the value is 1, it means 1 O'clock (Between one and two o'clock); if the value is 20-23, it means 20 to 23 o'clock (Between 20 and 0 o'clock). Day-value is the day of the week, which means a certain day or consecutive days. For example, 3 means Wednesday, and 1-7 means Monday through Sunday. The POE policy only takes effect if the POE policy of the interface is enable.	Interface configuration mode Switch(config-ge1/1)# Switch(config-vlan1)#
show poe policy <if-name>	Show interface POE policy info	Common mode Switch> Privileged mode Switch#

1.2.3 PD Query

Commands	Description	CLI mode
poe pd-ip-address <ip-address> no poe pd-ip-address	Set or clear the IP address of PD.default no IP address configured.If PD's IP address is configured, it will be periodically queried, and if PD does not respond at a given number of times, PD will be restarted.	Interface configuration mode Switch(config-ge1/1)# Switch(config-vlan1)#
poe pd-query-interval <interval> no poe pd-query-interval	Set the time interval for PD query . The default time interval is 5 seconds.	Interface configuration mode Switch(config-ge1/1)# Switch(config-vlan1)#
poe pd-timeout-number <number> no poe pd-timeout-number	Set the timeout number of PD query, and the default timeout number is 3.	Interface configuration mode Switch(config-ge1/1)# Switch(config-vlan1)#
poe pd-boot-time <time> no poe pd-boot-time	Set the startup time for PD. The default time is 120 seconds.	Interface configuration mode Switch(config-ge1/1)# Switch(config-vlan1)#
show poe pd-information	show all PD configurations info.	Common mode Switch> Privileged mode Switch#